BT Music Receiver

USER MANUAL

Thank your for purchasing our BT Music Receiver. This Operation Instruction provides you with additional information on setting up, using and maintaining of BT Music Receiver.

Contents


1. Information & Assembly	2-3
2. Features & Function	3-5
3. Operation & Setting	5-6
4 Special Notes	7

1

A. Information & Assembly BT Music Receiver connecting with speaker, used to share the music in your cell-phones or computers with speaker based on wireless Bluetooth technology. You can easily enjoy high quality music without the limitations and inconvenience from the wired lines.

Assembly

1 pc of BT Music Receiver (with USB

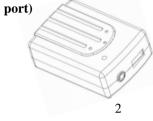

1 pc of plug (Spec as USA, European.)



1 pc of AV Line



B. Features & Function

- 1. Connecting with the speakers first when using BT Music Receiver,.
- 2. When playing music in your cell-phones or computers through the Speakers based on BT Music Receiver, you Need not connect

cell-phones or computers with the

- speakers.
- 3. HY-MP is the software symbol of BT Music Receiver, If your mobile phones or computers detected this symbol, it means you established a wireless connection with the speakers.
- 4. USB port in BT Music Receiver can be used to charge for other electronic products.
- 5. Specifications for related
 Power Input: 90-240AC/25 mA
 standby current < 5 mA
 Function: A2DP, AVRCP
 Signal-to-Noise > 80dB

4

isolation > 60Db

Blue-tooth Chip: CSR-BC05

RF Class: class 2(10m)

V2.0,CLASS 2

Frequence: +/3dB 70HZ-20KHZ

6. Effective range is 10-15 Meters.

C. Operation & Setting

- To plug the BT Music Receiver in outlet, make sure the power is on work. Different Plugs available for different standards.
- 2. To connect BT Music Receiver with the speakers. The indicating light on and flashing, It shows Bluetooth

is active and waiting.

5

- 3. To active the Bluetooth function in the cell-phones or computers for sourcing HY-MP symbol and pairing, connecting.
- 4. To input the password 0000, connecting with HY-MP, then press ENTER to complete the connection, meanwhile the indicating light will be always on.
- 5. By phone or computer operating Play Options, speakers will receive instructions accordingly.
- Music will be automatically stopped playing when phone calls coming, and play again if calls end.

6

D. Special Notes

- 1. Make sure the Bluetooth function is active in cell-phones or computers.
- 2. If pairing or connecting failed, to disconnect the power on BT Music Receiver, and reset again.
- Any Operation problems, please contact your local agents or distributors.

7

Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Compliance statement:

1: This device is verified to comply with Part 15 of the FCC Rules. Operation subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.